

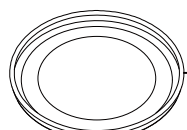


EJ-B ※ EJ-54D2B / EJ-123B / EJ-303B / EJ-1202B / EJ-3002B は除く
EJ-B ※ Except EJ-54D2B / EJ-123B / EJ-303B / EJ-1202B / EJ-3002B

丸皿
Weighing pan (round)

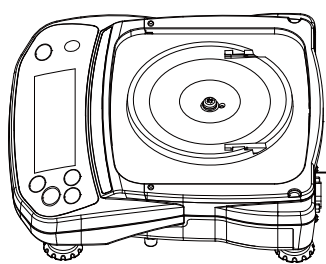


丸皿
Weighing pan (round)

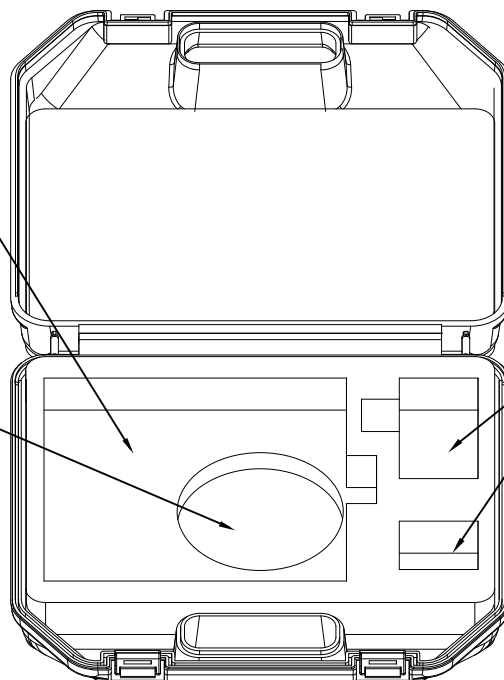


ACアダプタ入れ
Insert AC adapter

角皿
Weighing pan (square)

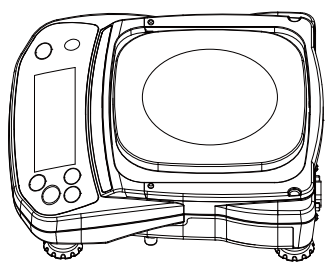



角皿は外さないでください
Do not remove Weighing pan.

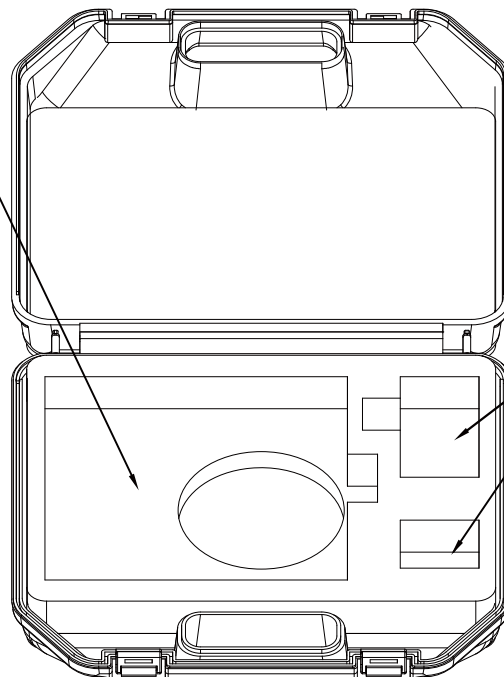


ACアダプタ入れ
Insert AC adapter

EK-i / EW-i / EK-EP / EK-AEP

丸皿
Weighing pan (round)

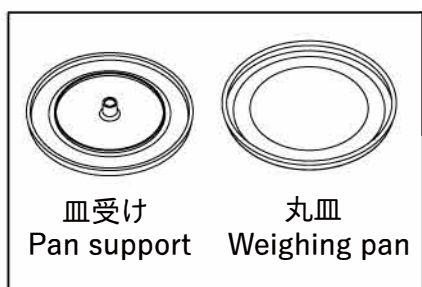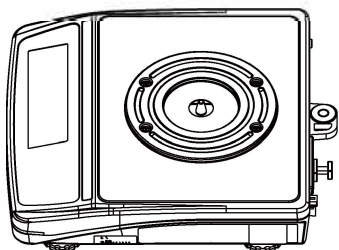


重ねて入れてください
Stack Pan support and Weighing pan

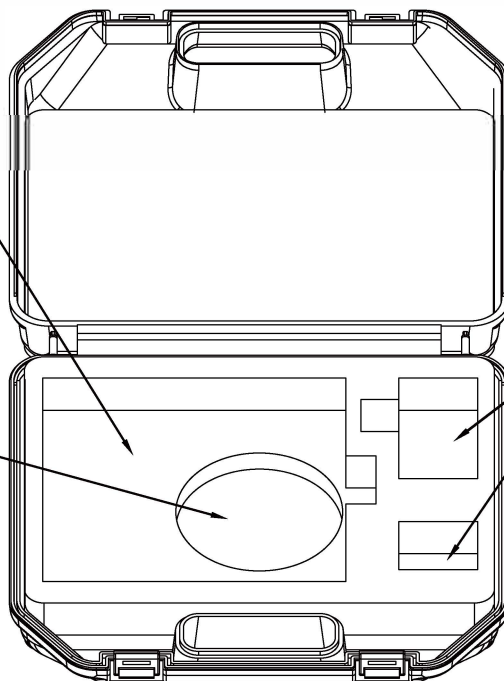


ACアダプタ入れ
Insert AC adapter

角皿
Weighing pan (square)

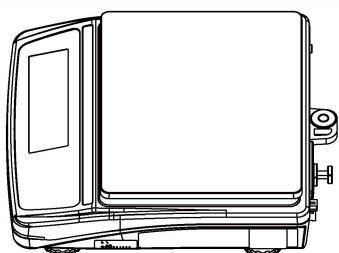

皿は外さないでください
Do not remove Weighing pan.

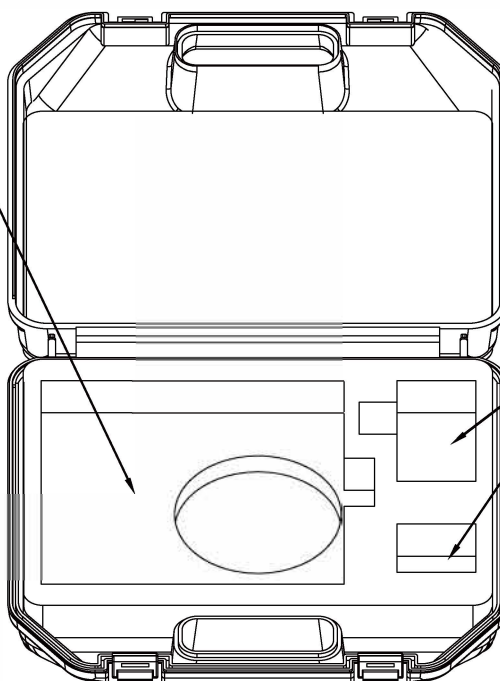

ACアダプタ入れ
Insert AC adapter